

In-vehicle Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

24.In-vehicle Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower panel on driver's side. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 3) Disconnect the connector and aspirator hose, remove the catch hook and remove the interior temperature sensor from the knee guard plate.

CAUTION:

Be careful not to damage the sensors and interior trim when removing.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC(diag)-32, IN-VEHICLE SENSOR, Diagnostic Procedure for Sensors.>